

airis[®] Tick

Vapeing with Airis Tick is the acme of enjoyment with it's elegant design and advanced technology!

How To Use:

- 1.Screw the magnetic adapter to your cartridge.
- 2.Turn on/off: Press the power button rapidly 5 times.
- 3.Set desired voltage: Press the power button rapidly 3 times to adjust voltage: Green light=3.4V/Low Blue light= 3.7V/Mid Red light= 4.2V/High
- 4.Preheat function: Press power button rapidly 2 times to start 15 seconds preheat cycle and press 1 times to stop.
- 5.Press and hold the power button, inhale to enjoy vaping experience.
- 6.Charging indication: Red light on during charging and turn off when full charged.

Features



Discreet



Variable Voltage



Window



Magnetic Joint




650mAh



Micro USB

Note : Cartridge not included

Designed and Manufactured by 
www.airistech.com

